



OPERATING INSTRUCTIONS

START LIGHTS

Manual mode:

- Pressing the **RED BUTTON** all **RED LIGHTS** should come **ON**.
- Then pressing the **GREEN BUTTON**, red lights should go off and all **GREEN LIGHTS** should come **ON**.
- Pressing the **ALL OFF BUTTON**, all lights should go **OFF**.

Automatic mode:

Normal start

- When pressing the **RED BUTTON** the **RED LIGHTS** should start coming on one by one till all five lights are **ON**.
- **FIVE** seconds from when the first light comes on till when all five lights are on.
- Pressing the **ALL OFF** button all lights should go **OFF**.
- If a start abort is needed then pressing the **ORANGE BUTTON** while the five lights are coming on should stop the procedure and **ORANGE LIGHTS** should come **ON FLASHING**.
- Then pressing the **GREEN BUTTON** should switch all lights **OFF** and **GREEN LIGHTS** should come **ON**.

PIT EXIT LIGHTS:

- The pit exit light should always remain independent in both modes (AUTO / MANUAL).
- As an option, pit exit light could also be operated remotely (from race control).
- Pressing the **OFF** button all lights should go **OFF**.