

1. INSTALLATION DU SYSTEME D'EXTINCTION / FIRE EXTINGUISHER SYSTEM INSTALLATION

101. INSTALLATION DANS L'HABITACLE / COCKPIT INSTALLATION


- a) Emplacement et orientation du corps
Location and orientation of body
- b) Emplacement et orientation des buses
Location and orientation of nozzles
- c) Précaution à prendre lors de l'installation du système
Special care to take with the installation of the system

Location is free within the cockpit volume it is recommended that it be mounted either transversely or longitudinally


Centrally in the vehicle , nozzle is labelled to show correct orientation.

Avoid obstructing the nozzle. Keep the cylinder away from strong heat sources

E1-1) Installation dans l'habitacle (emplacement et orientation du corps)
Cockpit installation (location and orientation of body)

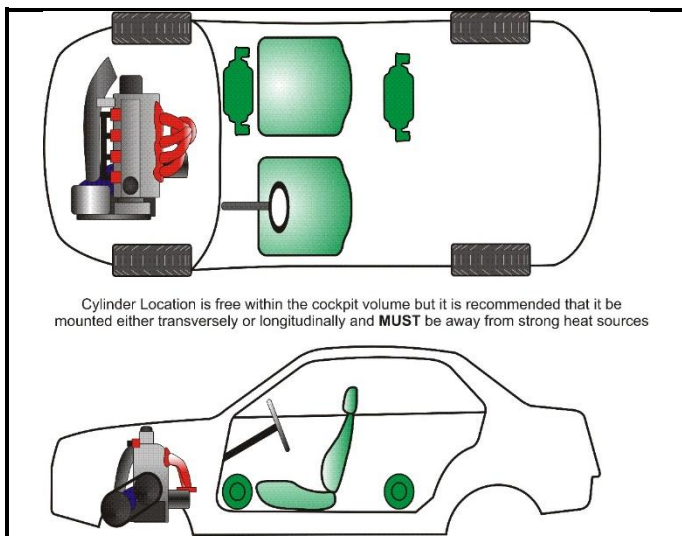

E1-2) Installation dans l'habitacle (emplacement et orientation des buses)
Cockpit installation (location and orientation of nozzles)

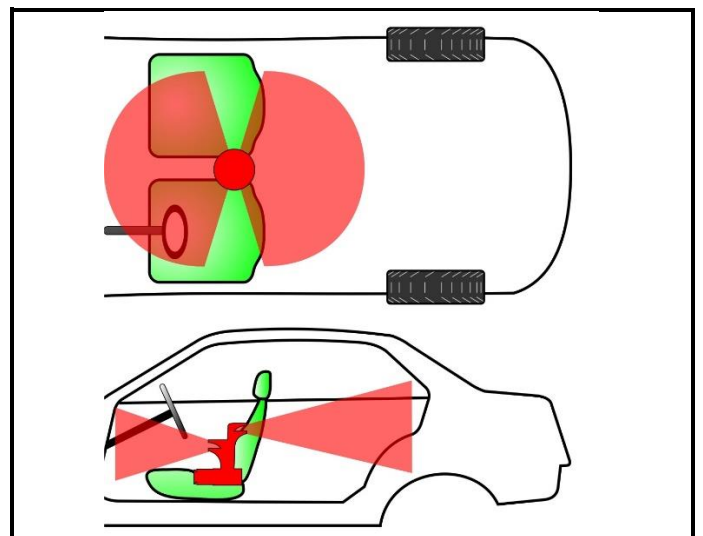


102. INSTALLATION DANS LE MOTEUR / ENGINE INSTALLATION

- a) Emplacement et orientation du corps
Location and orientation of body
- b) Emplacement et orientation des buses
Location and orientation of nozzles
- c) Précaution à prendre lors de l'installation du système
Special care to take with the installation of the system

2 nozzles on either side of the engine facing the inlet and outlet manifold, and 1 for specific targeting of likely ignition sources.

Avoid obstruction of the nozzles and ensure position is based on the longitudinal or transverse example

 E2-1) Installation dans le moteur (emplacement et orientation du corps)
Engine installation (location and orientation of body)



E2-2) Installation dans le moteur (emplacement et orientation des buses)
Engine installation (location and orientation of nozzles)

